

Soap Dispenser Transferring Instructions

Read these instructions completely before you begin.

Supplies Needed

- Coated Soap Dispenser
- Adjustable Wrap
- Heat Tape
- Water & clean sponge
- Heat Gloves or Oven Mitts

Important: Read instructions before use.

Adjustable Wraps have been tested and proven to work successfully for hundreds of consecutive uses per wrap. However, deliberately stretching the wrap beyond its specifications can result in loss of tension or tearing. Likewise, over-heating the wrap or placing it too close to the oven heating coils can weaken the wrap, causing it to burn or tear. To ensure the full life of each Adjustable Wrap:

- *Never* over-stretch the wrap beyond the simple distance needed to snap the hooks together.
- *Never* use a sharp object to adjust the length of the wrap, as this can cause a tear in the rubber. Adjustable Wraps can be used for a variety of items. Please see Troubleshooting & Tips for how to adjust the wrap.
- Do not bake the Adjustable Wrap at a temperature hotter, or a time longer, than recommended. See Step 1 for time and temperature recommendations.
- Never place the Adjustable Wrap closer than 3" from the oven heating coils.



Supplies needed: Adjustable Wrap, sublimation transfer, heat tape, soap dispenser.

Failure to follow these instructions could cause product failure and void any product warranty.

Step 1: Adjust Your Oven

Adjustable Wraps are designed for use in regular or convection ovens or industrial conveyor ovens, *only*. Do not use in a microwave oven under any circumstances. **Preheat** oven to **Bake at 425° F (400° F in convection oven)**. For best results, oven must be at full temperature prior to using Adjustable Wraps.

Oven Temperature: **425° F (400° F in convection oven)**
Dwell Time: **11-12 minutes**

Note: *These instructions, including transfer times and temperatures, are based on the inks, paper, ovens and products we use. Your inks, papers, etc. may require adjustments in your time/temp settings*

Step 2: Make sure that the spout or plastic attachment piece is not attached before heating. Tape transfer to soap dispenser. We suggest covering any exposed parts of the soap dispenser with an extra strip of paper. Do not overlap extra paper with imaged part of transfer paper. (Fig 1)



Fig 1

Step 3: Dampen the entire back side of the transfer with two passes using plain water and a clean, moist sponge or rag.

Note: We strongly recommend dampening the back of the transfer. This softens the paper and keeps it from wrinkling against the slight curvature present in the soap dispenser, thus preventing image voids.

Step 4: Hold one end of the wrap against the dispenser with one hand and stretch the wrap around the mug. (Fig 2) Place the metal bars under and through the metal loops, then squeeze closed with both hands.



Fig 2

Step 5: Place the wrapped soap dispenser in a preheated oven. Do not place closer than three inches from the heating coils. Do not use in a microwave oven!

Step 6: Bake mugs at **425° F (400° F in convection oven)** for **11-12 minutes**.

Step 7: When done, immediately remove wrap and soap dispenser from oven. Remove wrap by pushing upward on the metal bars of the buckle, thus releasing the wrap. (Remove transfer from soap dispenser. Items are hot! We recommend using oven mitts or heat gloves.)



Fig 3

Step 8: As soon as the wrap and transfer have been removed you may put the soap dispenser in front of a cooling fan. DO NOT immerse in water.

Step 9: Unscrew plastic attachment ring from spout (Fig 3 - Fig 4). Glue plastic attachment ring to soap dispenser opening with silicone adhesive. (Fig 5) Attach ring to soap dispenser and allow to dry (Fig 6). After glue is dry, screw spout to attachment ring (Fig 7).

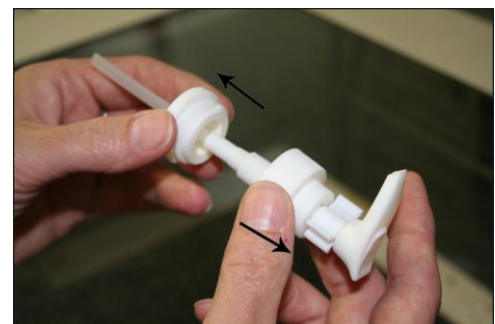


Fig 4



Fig 5



Fig 6



Fig 7


Troubleshooting & Tips

Fig 4

To adjust the QuickWrap, work the rubber through the buckle with your fingers **only**, creating some slack in the rubber. Once there is slack in the rubber between the buckles, you can then pull the rubber through the metal buckle to tighten or loosen to fit as needed.



Warning: Using any object other than your fingers to pull the rubber through the buckle can tear the rubber, voiding all warranties on the QuickWrap.

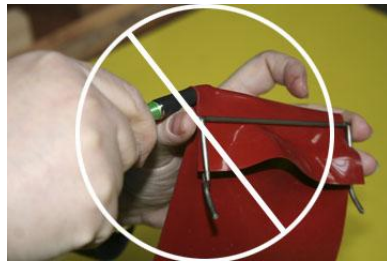

Customer Support

For support on these or any of our products, please call our toll-free number for assistance: **877.795.1500**. You may also write to us at Support@LaserReproductions.com.